

TurboTronic

House Electronics



TT-BG03

www.zline-world.com

Blender

TECHNICAL DATA

Model: TT-BG3

Rated voltage: 220V~240V, 50/60Hz

Power consumption: 430W

Protection class: II

BEFORE CONNECTING TO POWER

- * Before connecting to the power, please check whether the type of supply and the mains voltage match with the details given on the rating label on the appliance.
- * Using for the first time
- * Rip off all wrapping paper and plastic bags. Clean the fittings. (Refer to Cleaning Method)

SAFETY GUIDANCE

- * Special cares need to be paid when preparing food for a baby, an elderly or a patient. Before using the machine, you should be sure that the accessories have been completely sterilized and the sterilization has been under the disinfectant maker's instructions.
 - * Do not touch the blending blade when connecting to power.
 - * Keep your fingers, hair, clothes and other objects a distance from the machine when it is still rotating.
 - * Pull the plug off when changing fittings or after use.
 - * Do not mix hot oil or other oily ingredient.
 - * Avoid children or other people who do not know the operation of this machine to use it, unless they are under proper instruction. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - * Do not dip the body into water or damp the cable, in case you will get an electronic shock.. Children should be supervised to ensure that they do not play with the appliance.
 - * Do not put the cable on a hot surface or hang it from the kitchen table. Your children can be hurt when they are trying to drag the cable and turn down the machine.
 - * If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.
 - * Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
 - * Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
 - * Using the machine, do not operate the blender without food. Do not operate the machine over 20 seconds when the blender is unloaded. Avoid damage to the motor from overheating.
 - * If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - * Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
 - * Do not allow children to use the blender without supervision.
- Be careful when handling the sharp cutting blades, emptying the bowl and during cleaning

Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming


* This appliance is intended to be used in household and similar applications

* This appliance shall not be used by children. Keep the appliance and its cord out of reach of children

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance

in a safe way and if they understand the hazards involved

KNOWING YOUR BLENDER

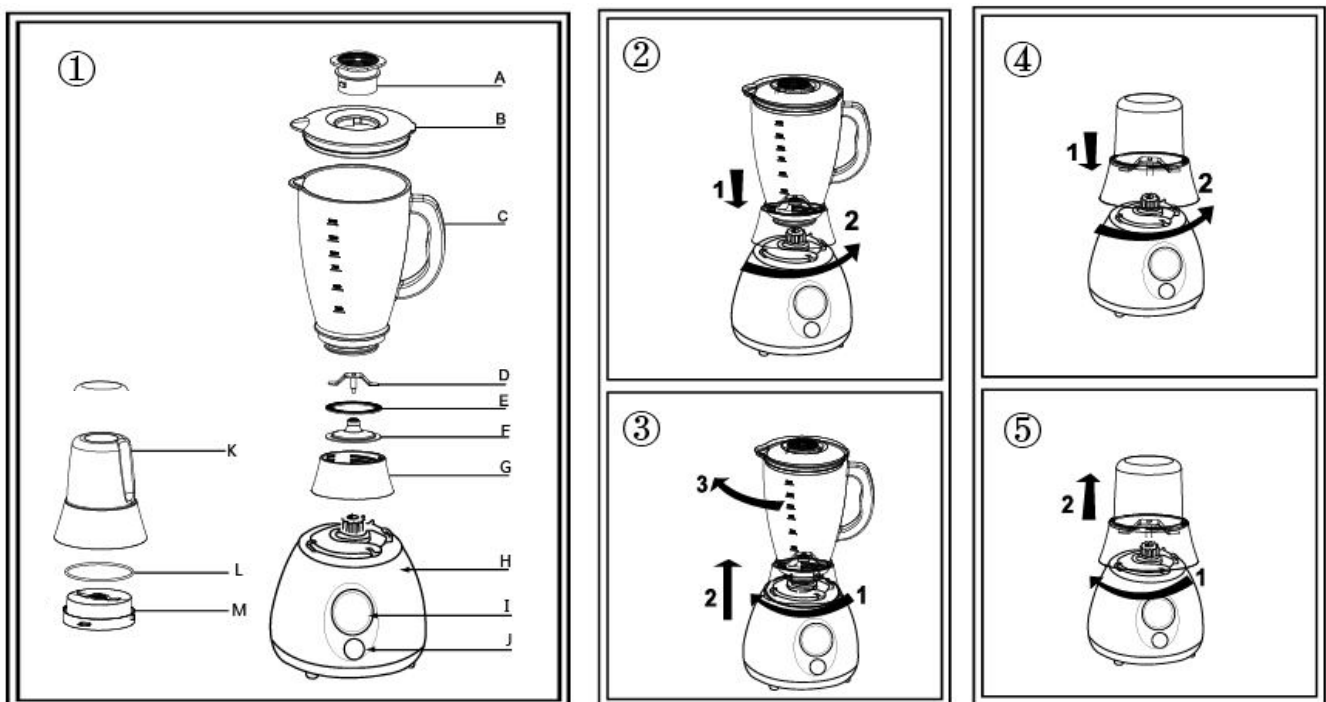

- A. Measured cup
- B. Lid
- C. 1.5L Glass Jar
- D. Glass Blender Blade
- E. Sealed Ring
- F. Glass Blender Blade Base
- G. Glass Blender Base
- H. Motor unit
- I. Speed button (0,1,2)
- J. Pulse button
- K. Grinder Cup
- L. Sealed Ring
- M. Grinder Base

①- Components list

- ②- Assembly the Pitcher onto machine
- ③- Disassembly the Pitcher from machine
- ④- Assembly the Grinder onto machine
- ⑤- Disassembly the Grinder from machine

INSTRUCTIONS FOR USE

- Fit the pitcher onto the motor unit , then lightly wriggle the blender flask until screw in the motor unit
- Wash fruit / vegetables first and slice into small pieces – about 2x2cm
- Place the sliced fruit / vegetables into pitcher
- Before blending, add desired level of water or liquid mixture into the pitcher. Pay attention that the mass food fills the pitcher not more than the highest line. You can see the highest standard line marked on the pitcher
- Fit the lid into the pitcher, then screw firmly.
- Plug the appliance in and then turn the speed button to 1,2 position
- After blending, please turn the speed button into 0 position. Wait for the motor unit stopping and then move the pitcher
- Move the lid by spinning it in opposite direction, then remove it.



WEEE

This product contains recyclable materials.

Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.