

# SMART FOLDING VACUUM CLEANER **CYCLONEV11**

## **INSTRUCTION MANUAL**



### **Folding Tube Cyclonic Vacuum Stick TT-CV11**

[www.zline-world.com](http://www.zline-world.com)



Dear Customer, thank you for buying **CYCLONE V11**  
Smart Folding Vacuum Stick by **TurboTronic®**.

With TT-CV11 **NO MORE BENDING OVER:** The tube can be folded to any angle you need so that you can easily clean the bottom of the bed and furniture without bending over and squatting. LED Headlights help you see dust and debris that might otherwise have been missed and make cleaning under furniture much easier.

 
Please read these operating instructions carefully before installation and commissioning in order to familiarize yourself with your new device and to achieve maximum operational safety. In particular, the safety regulations must be observed to avoid accidents and damage. We recommend that you keep the instructions carefully for future reference.

## **Description of the device**

1. 1 Suction power button
2. ON/ OFF button
3. Motor unit
4. Release button for suction pipe or Nozzle / brush in manual suction mode
5. Folding pipe
6. Release button for floor nozzle (or nozzle / brush if mounted on the suction pipe)
7. Electric floor nozzle
8. Dust containers
9. Battery charge status indicator
10. Open button the dust container flap
11. HEPA filter with sponge cover and cyclone insert
12. 2 in 1 crevice nozzle
13. Battery
14. Release button to remove the battery
15. Screws for wall bracket
16. Charger (mains adapter)
17. Wall bracket
18. Cleaning brush

### **Notes on the 2-in-1 crevice nozzle**

As a nozzle without a brush, it is ideal for vacuuming sofa cracks, corners, stairs, etc. Use as a nozzle with a brush for vacuuming furniture, bookshelves, smooth surfaces, and more.

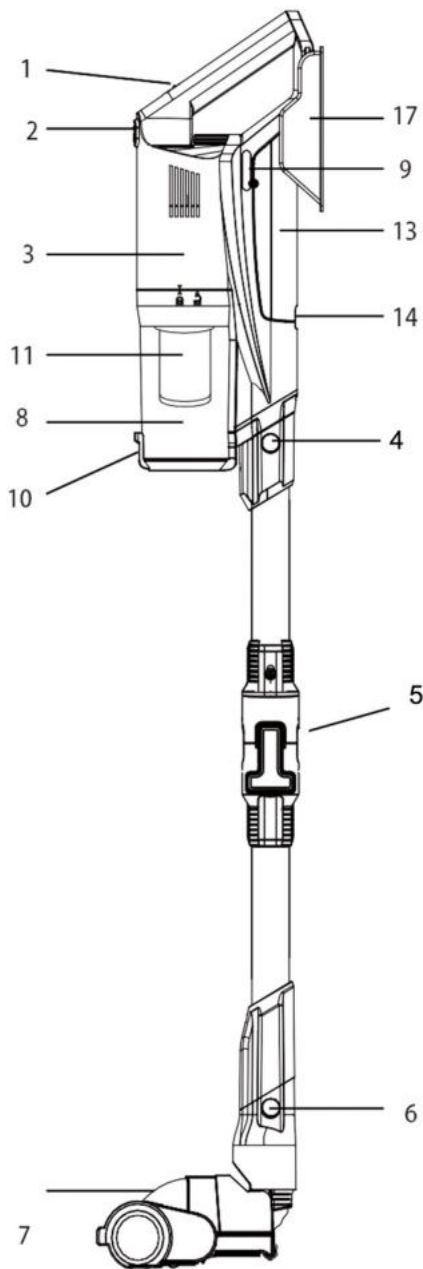

## **SPECIAL SAFETY INSTRUCTIONS FOR YOUR CYCLE CLEANER**

Keep the device away from heaters, fire, flames, and cigarettes. If the air intake opening is blocked or the suction pipe or a nozzle or brush is blocked, you must switch the vacuum cleaner off immediately with the ON / OFF button.

Remove the reason for the blockage before you switch the device on again. Do not vacuum up large or pointed objects. Therefore, you should remove these objects from the floor before vacuuming. Do not vacuum any flammable or burning/ glowing substances (e.g. cigarette ends) or liquids.

 
Only operate the vacuum cleaner with the correctly installed cyclone insert and HEPA filter.

Empty the dust container regularly.

Charge the battery every 3 months, even if the device has not been put into operation, to protect against deep discharge (see note "Periodic charging of the battery").


### **INSTALL THE WALL SUSPENSION**

1. Screw the wall bracket (17) with the screws at a suitable height on the wall. It should be installed near an electrical outlet.
2. The device's suspension device is located on the rear of the motor handle.
3. Hang the cyclone suction device on the hanging device on the wall mounting.

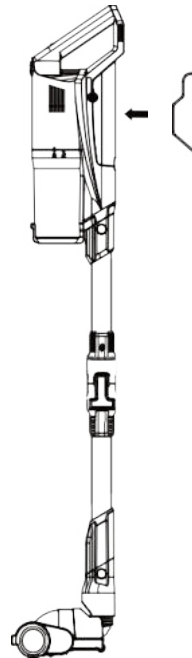


## ASSEMBLY OF THE VACUUM CLEANER

 
1. Insert the filter in the dust container
  - a) Place the HEPA filter in the cyclone insert
  - b) Place the cyclone insert in the dust container. It is 360

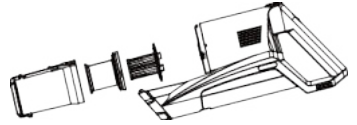

 
2. Install the dust container in the motor unit
  - a) Place the dust container on motor unit according to icon indication.
  - b) Rotate the dust container to make the arrow reach the position of the lock sign.
3. Attach the battery to the motor unit Snap the battery into the battery compartment and then push it into the motor unit until you hear a click.

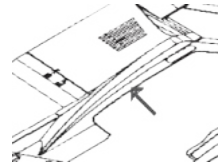

 
4. Mount the folding pipe and floor nozzle on the motor unit



 **Note:** You can also insert the floor nozzle directly into the connection opening of the motor unit until it clicks into place.



5. Remove folding pipe and floor nozzle
  - a) To disconnect the intake manifold from the motor unit, press the upper release button (4).
  - b) To remove the floor nozzle from the suction pipe, press the lower unlocking button (6).
  
6. Mount the 2 in 1 nozzle on the device
  - a) Cyclone vacuum cleaner as a Hand vacuum cleaner  
use: 2-in-1 nozzle directly into the connection opening of the motor unit. Mount the 2-in-1 nozzle on the device until it clicks in.
  - b) Use a 2-in-1 nozzle with a suction pipe. Insert the nozzle into the lower opening of the suction pipe until it clicks into place. This variant is ideal for vacuuming ceilings or narrow stairs.  
To remove, press the release button and remove the nozzle.

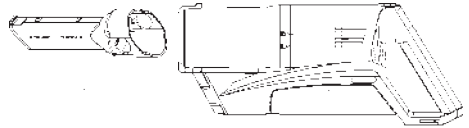 

## **CHARGE THE BATTERY**

### **STEP 1**

Use only the supplied AC adapter as a charger for the battery. Hang the assembled vacuum cleaner on the wall mounting, the battery is in the motor unit.

### **STEP 2**

Insert the charger plug into the device socket. Insert the charger plug into an electrical outlet. The top light of the battery indicator flashes during charging. Charge the battery with the charger for 4 -5 hours before using the vacuum cleaner.

Warning: Always keep the battery and charger dry. For charging, the battery must always be in the device, never removed.

### **STEP 3**

As soon as four bars light up in the charging status display (9), the battery is fully charged and the device can be put into operation.

### **ATTENTION:**

Always fully charge the device before first using.

As the suction power drops, please clean the dust cup, cyclone insert, HEPA, and sponge and charge the device.

### **IMPORTANT: PERIODIC CHARGING OF THE BATTERY**

To prevent deep discharge, the battery must be charged every 3 months even when not in use. Failure to follow this procedure will void the warranty on the battery. Our technical service can determine whether a battery is deeply discharged.

## **EMPTY DUST CONTAINER**

- When the dust container is full, you should empty it to maintain full suction power.
- The device must be switched off beforehand and the battery removed from the motor unit (press the release button (14) before emptying the dust container).
  1. Turn the dust container to separate it from the motor unit.
  2. Hold the flap of the dust container over a waste bin and press the button (10) to open the flap. Empty dust and dirt.
  3. Close the flap again so that it clicks into place. Put the empty dust container back into the device.

## **CLEANING THE DUST CONTAINER, THE CYCLONE INSERT AND THE FILTER**

When the wind tunnel is blocked, the machine will shut down automatically. The LED on the battery will flash for 5 seconds and the machine will beep for 5 seconds. This means you should clean the wind tunnel and wash the HEPA and sponge.

From time to time, you should remove and clean the dust container and the cyclone insert with the HEPA filter, at the latest when you notice that the suction power is deteriorating.

1. Turn the dust container (8) and remove it from the device. Empty it as described in the chapter "Emptying the dust container".
2. Take the cyclone insert and the HEPA filter out of the dust container.
  3. Knock out the dust from the cyclone, insert, and the sponge cover or clean them with a brush.
3. them with a brush.
4. You can also clean the cyclone insert, HEPA filter, and the sponge cover under lukewarm water.
5. Rinse the dust container under lukewarm water, dry it with a soft cloth, and then let it air dry completely.
6. After you have completed this, cover the sponge onto the HEPA filter and install the HEPA filter into the cyclone insert and put them back into the device and close the flap so that it engages.

### **Attention:**

Before using, ensure all of the cleaned parts are totally dry. The filter system must be installed to avoid the dust going into your operation system, causing noise or a bad smell. If this happens, please stop and check your device.

 
## **CLEANING THE VACUUM CLEANER**

- When the device is switched off and disconnected from the charger, you can wipe the device with a dry cloth.
- Do not use abrasive rags or cleaners, steel wool, acetone, or alcohol. Never immerse the vacuum cleaner in water.
- Store the device in a dry, cool place out of the reach of children.

## **CLEAN THE ELECTRIC FLOOR NOZZLE**

Hair and lint can get caught in the brush, which must be removed from time to time so that the suction power does not deteriorate.

1. Slide the button on the bottom of the floor nozzle to the left and remove the cover.

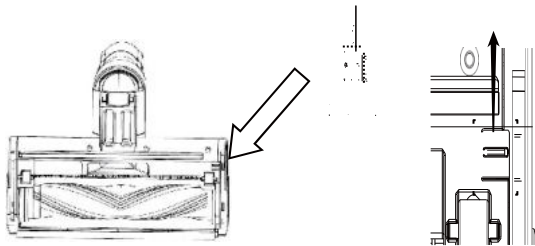

2. Remove the cylinder brush. Use scissors to cut the hair and lint caught in the cylinder brush and remove them.
3. After cleaning, put the cylinder brush back in the nozzle, put the cover on it, and push the button to the right again.



## **PROBLEM SOLVING**

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>	<b>PROBLEM SOLVING</b>
Vacuum cleaner doesn't work. / Vacuum cleaner cannot be switched on.	<ul style="list-style-type: none"> <li>• The battery is empty.</li> <li>• The battery is being charged.</li> </ul>	<ul style="list-style-type: none"> <li>• Charge the battery with the charger.</li> </ul> <p>Disconnect the device from the charger as soon as the charging process is complete.</p>
Suction power is low or nonexistent.	<ul style="list-style-type: none"> <li>• The dust container is full.</li> <li>• The cyclone insert and filter must be cleaned.</li> <li>• The air intake is blocked.</li> <li>• The battery is weak.</li> </ul>	<ul style="list-style-type: none"> <li>• Empty the dust container.</li> <li>• Clean the cyclone insert and filter and insert correctly.</li> <li>• Check air intake for possible blockage and remove blockage.</li> <li>• Charge the battery with the charger.</li> </ul>
Dust escapes from the device.	<ul style="list-style-type: none"> <li>• The dust container is full.</li> <li>• Cyclone insert and filter are not inserted correctly.</li> </ul>	<ul style="list-style-type: none"> <li>• Empty the dust container.</li> <li>• Insert the cyclone insert and filter correctly.</li> </ul>
Battery does not charge.	<ul style="list-style-type: none"> <li>• The battery needs to be replaced.</li> </ul>	<ul style="list-style-type: none"> <li>• Contact your point of sale.</li> </ul>
Unusual noises while sucking.	<ul style="list-style-type: none"> <li>• The dust container is full.</li> <li>• Floor nozzle blocked by hair and lint.</li> </ul>	<ul style="list-style-type: none"> <li>• Empty the dust container.</li> <li>• Remove and clean the floor nozzle.</li> </ul>



## **IMPORTANT SAFETY INSTRUCTIONS**

- In order to avoid injuries caused by electricity such as electric shock, short circuits, or fire, we ask you to always observe the following safety regulations:
- Make sure that you never touch the live parts! Electric shock can result in serious injury or even death.
- Only connect the charger to an AC outlet with a voltage of 120V/60HZ. The minimum fuse protection for the socket is 6 amps. The socket should be secured with a residual current circuit. Please be sure to observe the applicable local ordinances and regulations.
- The device must never be operated without supervision or used for other purposes. Use only the accessories supplied with this vacuum cleaner.
- Never use this device to vacuum water, liquids, flammable or explosive substances or materials, burning or hot ashes, matches, cigars, or substances harmful to health.
- Never use to pick up powder-like substances, such as flour, as this could increase the risk of engine damage.
- Never pick up pointed or sharp objects. E.g., nails, needles, etc.
- Never cover the device while it is in operation.
- Never store or place the device near heat sources such as an oven, stove, heating, or heat-emitting devices. Never use the device in potentially explosive areas. Protect the battery from heat and use and store at temperatures between 0° - 40°C.
- Never place the device near bathtubs, swimming pools, or containers filled with water where there is a risk of it falling into the water. The product coming in contact with water could cause electric shock.
- Never immerse the vacuum cleaner or charger in water!
- Only clean the device with a dry cloth.
- Do not use or store the device outdoors. Never expose the vacuum cleaner or battery to moisture or rain or bring it into contact with water. Never vacuum wet surfaces. The device should not be exposed to the sun for long periods.
- Always fully charge the battery before using it for the first time or after a long period of non-use. If you do not want to use the device for a long time, the battery must still be charged every 3 months (see note "Periodic charging of the battery").
- The device is not designed for commercial use.
- Set up the device in a safe environment so that it cannot be knocked or tipped over. The surface should be flat and dry. Special care is required when using the device on stairs.
- Electrical devices are not toys for children. Never leave the vacuum cleaner unattended when children are around and place it out of reach of children.
- Children should never be allowed to play with the packaging material as there is a risk of suffocation from plastic bags. Always keep the cyclone suction device, battery, and charger away from children under 8 years of age.
- Persons with limited experience, physical, sensory, and mental abilities, as well as children over 8 years of age are not allowed to use the vacuum cleaner unless they are supervised by a person responsible for their safety or instructed by them exactly how to use the device.
- Children under 8 years of age are not allowed to use the vacuum cleaner. Persons under the influence of alcohol and medication must not use the device.

- Power supplies must never be plugged in or unplugged with wet hands. The device must never be used with wet or damp hands. Never pull on the cable to disconnect the charger from the mains, but always on the mains plug.
- Only use the device with the supplied battery, a different battery could damage the device or injure you.
- Only charge the device with the supplied charger / mains adapter.
- Never throw or stab the battery.
- Never remove or insert the battery with wet hands.
- Never use the device while it is being charged.
- Always bring the device to your point of sale for repairs and only use original spare parts. Never remove permanently installed covers or carry out repairs yourself as this will increase the risk of electric shock.
- Use the device only with a faultless charger, power cord, and plug and protect it from moisture. If the device is not working properly, is damaged, or has become wet.
- Do not operate it under any circumstances and have it checked by your sales office. This also applies to the nozzle, brush, and suction pipe.
- Do not insert anything into the device openings. Never cover air openings.
- Do not use the device if the nozzles, pipe, or air intake are blocked. Always remove the blockage before switching the device on again. Keep suction openings, nozzles, and brushes away from the face, body, hair, jewelry, and clothing.
- Only use the device with a dry and correctly installed cyclone insert and HEPA filter as well as the dust container.
- If you attach or remove accessories, the device must be disconnected from the charging station.
- Improper repairs or handling can result in considerable risks for the user and the environment. We accept no liability for damage caused by incorrect use, non-compliance with local safety regulations, or use other than that specified in this manual.
- Improper repairs or handling can result in considerable risks for the user and the environment. We accept no liability for damage caused by incorrect use, non-compliance with local safety regulations, or use other than that specified in this manual.

## DISPOSAL AND GUARANTEE DISPOSAL



Disused devices must be made unusable and must not be disposed of with the household waste. Please take your device to the next collection of recyclables, so that recyclable material is reused and your device is disposed of in an environmentally friendly way.

## DISPOSAL OF THE BATTERY

- This lithium-ion battery uses the latest technology and will serve you well for several years. However, since lithium-ion batteries also contain substances that are dangerous for the environment, they must not be disposed of with normal household waste.
- Before you dispose of the cyclone vacuum, remove the battery, glue the battery ends with a firm adhesive tape and take the battery to a collection of valuable materials so that it can be recycled or disposed of in an environmentally friendly matter.



Li-ion



## LIMITED WARRANTY

Limited Warranty applies to purchases made from authorized retailers of **TurboTronic®**.

**TurboTronic®** Warranty coverage applies to the original owner and to the original product only and is not transferable.

**TurboTronic®** warrants that the unit shall be free from defects in material and workmanship. Limited Warranty apply only when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

### **What is covered by this warranty?**

1. The original unit and/or non-wearable parts deemed defective, in **TurboTronic®** sole discretion, will be repaired or replaced
2. **TurboTronic®** reserves the right to replace the unit with one of equal or greater value.

### **What is not covered by this warranty?**

1. Normal wear and tear of wearable parts (such as blending vessels, lids, cups, blades, blender bases, removable pots, racks, pans, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not

covered by this warranty.

2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by **TurboTronic®**. These defects include damages caused in the process of shipping, altering, or repairing the **TurboTronic®** product (or any of its parts) when the repair is performed by a repair person not authorized by **TurboTronic®**.
6. Products purchased, used, or operated outside Europe.

Illustrations may differ from actual product.

We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

**TurboTronic®** and **Z-Line®** are registered trademarks of **Z-GLOBAL B.V.B.A.®**.